

## Setup 6.

Check the LED indicator and make sure the device is ready for software configuration.




LED indicator	Status	Description
	ON	When the router is powered on
	Steady	ADSL connection with central office has been established
	Blinking	Establishing the connection between ADSL2+ Router Modem and central office
	Blinking	Transmitting or receiving data from Internet
	Steady	Connection to PC has been established
	Blinking	Transmitting or receiving data from PC

5

## Setup 7.

Insert the CD and follow the on-screen instructions

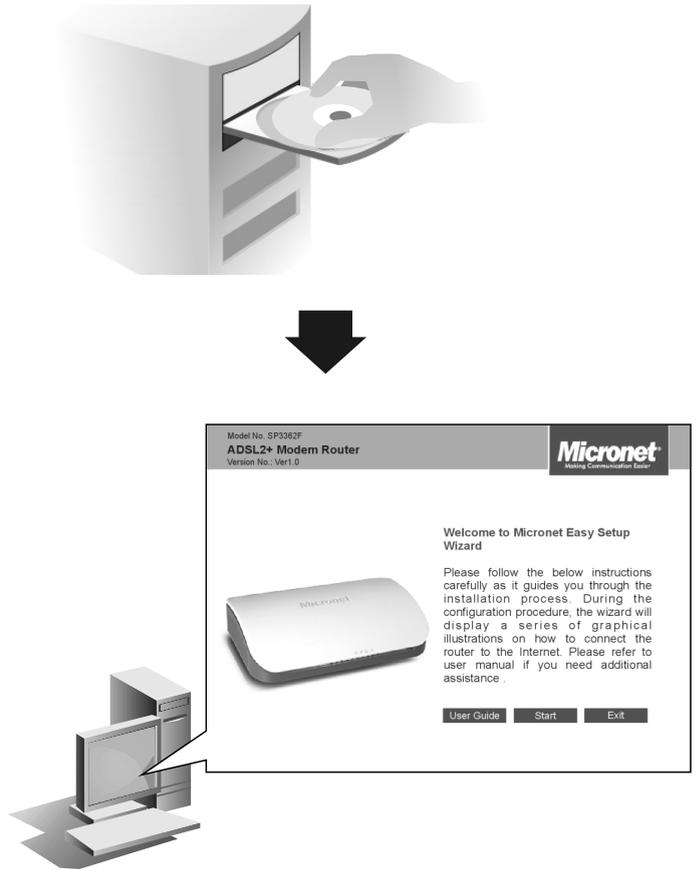

6

## CE Mark Warning

This equipment complies with the requirements relating to electromagnetic compatibility of the essential protection requirement of Council Directive 89/336/EEC on the approximation of the laws of the Member States. Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from the company.

Communicate via *Micronet network*



**Micronet**  
Making Communication Easier

Quick Installation Guide

## ADSL2+ Modem Router

Model No.: SP3362F



**CE FC**  
P/N 2300-0648




WEEE Directive & Product Disposal

At the end its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

7

## Pre-installation preparation

### Package Content

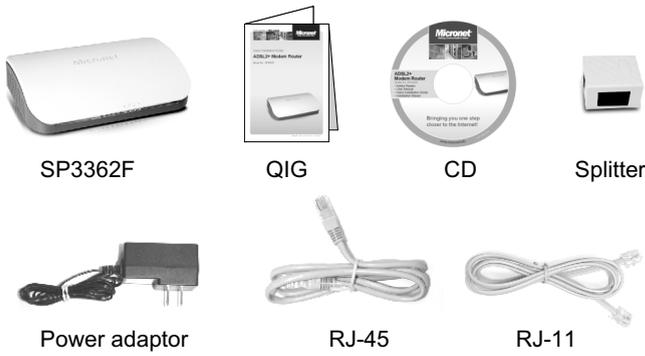

### Features

- Compliant with ADSL2/2+ standard
- Support 24 Mbps downstream and 1Mbps upstream
- Built-in setup wizard for easy installation
- 6000V enhanced lightning protection
- QoS for optimized bandwidth management
- Compliant with Universal Plug and Play (UPnP)
- Compatible with most DSLAM around the world
- Provide web-based management and upgradable firmware
- Support NAT to share a single account with multiple workstations
- 1 x 10/100Mbps Ethernet (RJ-45) port


1

## IP Address Configuration

PC/Notebook must belong in the same IP range and subnet as the modem router. Follow the steps below to configure IP settings for LAN PC.


### Setup 1.

In the control panel, go to Network Connections > Local Area Connection and you'll see the screen below. Highlight **'Internet Protocol (TCP/IP)'** and click on **'Properties'**.

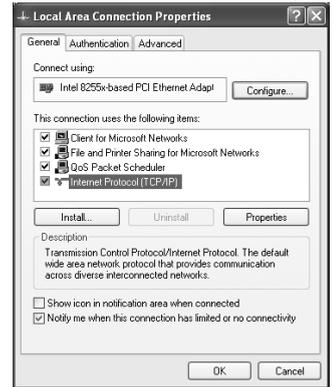

### Setup 2.


Select **'Obtain an IP address automatically'** and **'Obtain DNS server address automatically'**, then click **OK**.

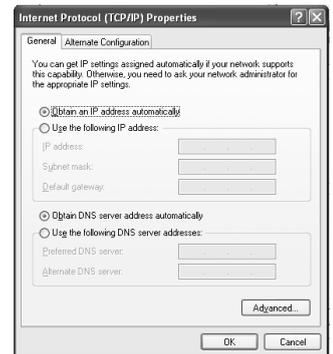

2

### Setup 3.


- Connect your main ADSL phone line to the **"Line"** port of the splitter.
- Connect SP3362F's **"Line"** port to the **"Modem"** port on the splitter.
- Connect your telephone to the **"Phone"** port on the splitter.

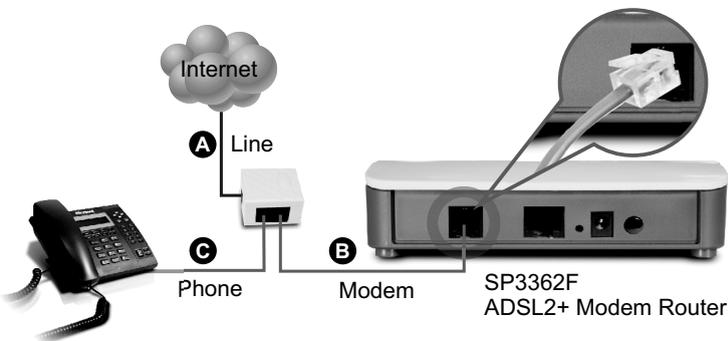

3


### Setup 4.

Turn on the ADSL2+ Modem Router

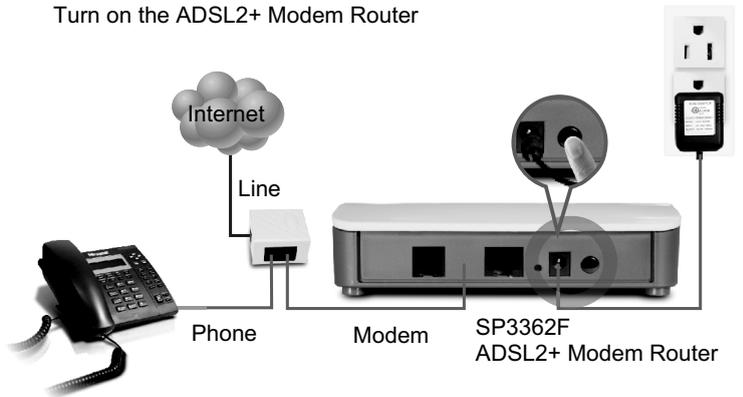

### Setup 5.

Using a network cable (RJ-45), connect your computer system to the back of the ADSL2+ Modem Router as shown below.

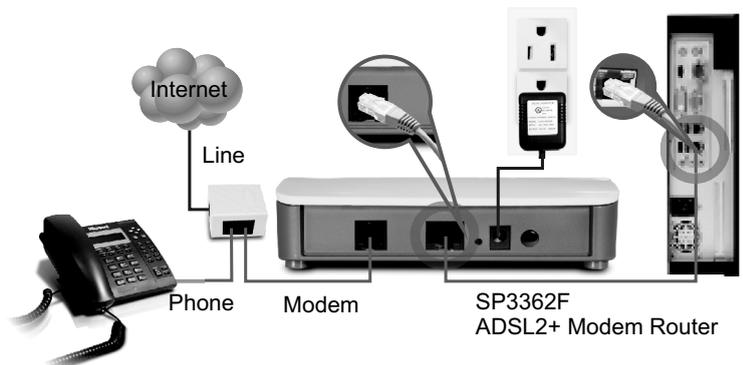

4